


## INSTALLATION INSTRUCTIONS

### **2004-08 TOYOTA 4-RUNNER DASH APPLIQUE**

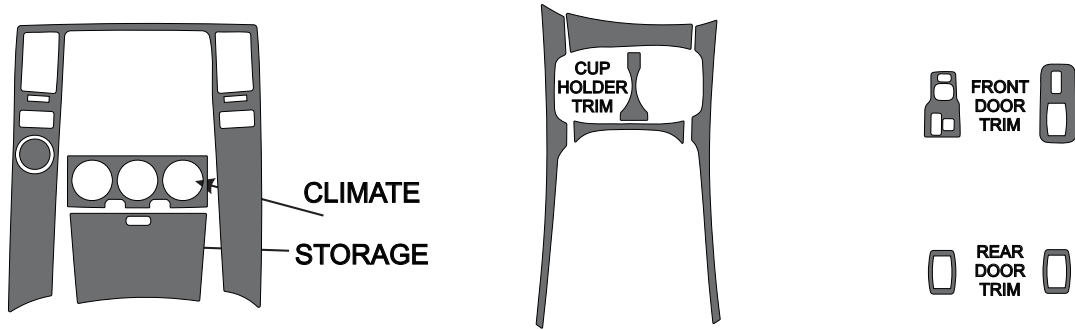

**Pre-Installation notes:** Handle the parts with care, without bending excessively. To obtain optimum adhesion, the temperature of the car interior should be approximately 75 degrees(F).

**1.** Inspect parts prior to installation to avoid unnecessary removal.

**2.** Dry fit all parts to confirm fit and finish before installation. Carefully check placement and alignment of each piece to corresponding factory component..

**Figure #1**



**3.** Carefully clean factory components by applying 3M Prep-solvet 70 to a clean cloth. Thoroughly clean all surfaces the parts will be applied to. Dry with another clean cloth. **Figure#2**



**4.** Apply distilled water to a clean cloth and thoroughly clean all surfaces parts will be applied to. Dry with another clean cloth. **Figure#2**



**5.** Remove 3M liner from the adhesive on the back of the piece. Make sure to remove all of the liner off every strip of tape. Do not touch or otherwise contaminate the adhesive once the protective liner is removed. **Figure#3**

**6.** Align piece uniformly to edge of the factory component while also aligning any cut-outs for switch and ashtray openings. Carefully press into place using your finger tips and the palm of your hand.

**Figure#4**



**SUPERIOR**  
DASH

**Caution: use 3M Prep Solvent 70 carefully and in well ventilated area**